 
 





## QR CONTROL MECHANISM

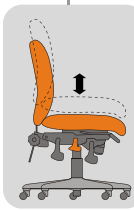


**Pneumatic height adjustment**  
Lift lever to adjust seat height

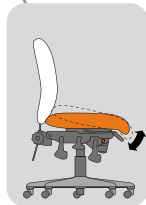

 **Forward tilt lock**  
In a tilted position turn lever clockwise to forward tilt  
To return to horizontal position decline and turn lever counter-clockwise

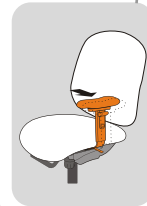


 **Arm width adjustment**  
Lift to adjust arm width

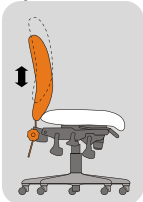


**Back height adjustment**  
Turn knob counter-clockwise to loosen, adjust height, re-tighten

 **Seat slide adjustment**  
To adjust seat depth push lever to allow seat to slide forward or backward

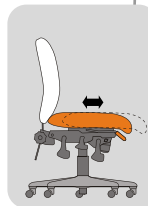

 **Arm height adjustment**  
Squeeze lever and adjust arm height, release to lock

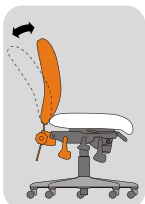

**Independent back angle adjustment**  
Lift lever to adjust back angle while seated, release to lock in desired position



**Executask control for seat and back tilt**  
Lift lever to free float seat and backrest  
Release lever to lock in desired position



**Torsion spring**  
Tilt tension adjustment

[www.standardsystems.com](http://www.standardsystems.com)  
[info@standardsystems.com](mailto:info@standardsystems.com)

Unit 5, 30 Braid Street  
New Westminster, B.C.  
Canada V3L 3P3

Tel: 604-777-0407  
Fax: 604-777-0447

### Standard System Limited Warranty

We guarantee all non-moving metal components to be free of material defects and workmanship for a period of ten years from the original purchase date. We will replace any unaltered non-moving metal components which, based upon our examination, proves to be defective. For pneumatic cylinders, wooden and plastic components, casters and upholstery materials, the said warranty shall be for five years. Swivel/tilt mechanisms and bases shall also be for ten years.

This warranty does not cover labour or delivery charges and does not apply to items subjected to abuse, misuse, neglect, alteration, or damage caused by shipment, storage, accident, fire, flood or earthquake.