 




SK CONTROL MECHANISM

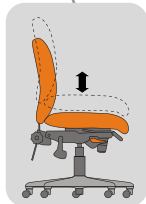

 
Pneumatic height adjustment
Rotate lever down to adjust seat height




Executask control for seat and back tilt
Rotate lever down to lock seat and backrest (five positions)
To free float rotate lever up




Back height adjustment
Turn knob counter-clockwise to loosen, adjust height, re-tighten

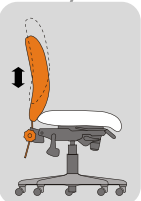

 
Seat slide adjustment
To adjust seat depth push lever to allow seat to slide forward or backward

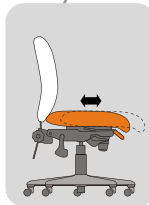

 Arm height adjustment
Squeeze lever and adjust arm height, release to lock

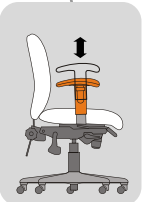

 Independent back angle adjustment
Lift to adjust back angle while seated, release to lock in desired position

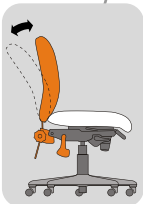

Torsion spring
Tilt tension adjustment



www.standardsystems.com
info@standardsystems.com

Unit 5, 30 Braid Street
New Westminster, B.C.
Canada V3L 3P3

Tel: 604-777-0407
Fax: 604-777-0447

Standard System Limited Warranty

We guarantee all non-moving metal components to be free of material defects and workmanship for a period of ten years from the original purchase date. We will replace any unaltered non-moving metal components which, based upon our examination, proves to be defective. For pneumatic cylinders, wooden and plastic components, casters and upholstery materials, the said warranty shall be for five years. Swivel/tilt mechanisms and bases shall also be for ten years.

This warranty does not cover labour or delivery charges and does not apply to items subjected to abuse, misuse, neglect, alteration, or damage caused by shipment, storage, accident, fire, flood or earthquake.