



Chair Functions



Manual back height adjustment

The height of the back can be individually adjusted to suit the user's body size.



Automatic back height adjustment

The height of the back can be individually adjusted to suit the user's body size.



Seat slide adjustment

By sliding the seat cushion forward or backward; the support for the legs can be individually adjusted.



Pneumatic height adjustment

The height changes continuously depending on the weight on the seat.



Forward tilt lock

With the adjustable seat tilt the normal position of the seat can be adjusted by 4° to allow the seat cushion to be tilted forward.



Torsion spring tilt tension adjustment

The spring-force tension control feature allows the backrest pressure to be individually adjusted to suit the user's height, weight and personal sitting preferences.



Executask control for seat and back tilt

The executask feature allows the user to tilt seat cushion and backrest simultaneously and release to lock in any position.



Independent back angle adjustment

The independent back angle adjustment allows the users to adjust backrest angle while seated and then release to lock on desired position.



Synchro tilt control

The synchro mechanism changes the opening angle between seat and backrest ergonomically.



Lumbar back height adjustment

The height of the lumbar support can be individually adjusted to suit the user's body size.



Manual headrest height adjustment

The height of the Headrest can be individually adjusted to suit the user's body size.